



Ultrasonic Phased Array Flaw Detector Series

www.sonatestveo.com

# Sonatest Veo series

## Power & performance perfectly packaged.

The **veo** range of Phased Array ultrasonic flaw detectors reinforces Sonatest's reputation for innovative technician focussed product development. Simple controls, superior performance, advanced features and rugged enclosure deliver simplicity, capability and reliability to the technician's finger tips.

Ultrasonic Phased Array technology has become the established method for advanced NDT testing applications. Phased Array techniques allow the user to control parameters such as beam angle and focal distance to create an image of the test part; enhancing defect detection and speed of testing. In addition, using the latest computer technology, data can be permanently recorded for processing and report generation. The veo's robust design, intuitive user interface and extensive online help brings the power of Phased Array to the field-based technician. Typical applications include Weld Inspection, Corrosion Mapping, Aerospace and Composite testing.

## Simplicity

The intuitive menu system is application and workflow driven, with set up and operation swiftly becoming second nature. Integrated Help and Wizards guide the user through scan set up whilst **Optimisation Tips** ensure the **veo** always performs at the highest level. The unique **3D ScanPlan** view gives immediate visual confirmation of correct set up and ultrasound coverage, even in complex multi-probe applications.

Fast and efficient wizards for Sound Velocity, Wedge Delay, TCG, DAC, Sensitivity and Encoder calibration are all provided as standard. Clear indication of the calibration status is provided on screen via a simple traffic light system, so that operators can check at a glance that the veo is calibrated for the inspection task.

Menu navigation uses Sonatest's second generation scroll wheel technology for fast parameter selection, with shortcut keys for the most used functions and alphanumeric entry. The familiar Start, Stop and Record keys switch quickly between set up, acquisition and recording modes.

# Capability

The powerful **veo** platform unlocks a new level of performance in a portable instrument, helping you to maximize your efficiency on-site. The Inspection Plan shows the operator in 2D and 3D where probes are positioned on the test part, simplifying the inspection setup and provid-





ing an inspection reference for reporting. All adjustments to focal laws are instantaneous, with angle resolution to 0.1° and up to 1024 focal laws without loss of performance. Multiple scans from different probes may be displayed and evaluated at the same time. Multiple sectorial scans, true top, side and end view extractions plus C-Scans are all supported by the veo. TOFD and Phased array inspections can be carried out in tandem at full scanning speed and with up to 3GB data files large areas can be inspected more efficiently. Full resolution waveform data can be stored directly to a removable USB data key for ease of back up and transfer to PC.

The **Veo** has two dedicated mono element flaw detection channels for conventional UT and TOFD inspection. Based on Sonatest's Masterscan flaw detector the channels have 400V pulsers, Time Corrected Gain and low noise amplifiers for the most demanding applications. An impressive hardware specification provides high quality ultrasonic data, via a full 16 bit high speed architecture and 12 bit ADC technology. Digital signal processing enables smoothing and averaging, enhances image interpretation. Measurement and sizing of indications are quickly achieved using advanced measuring tools such as Hyperbolic Cursors for TOFD.

For any flaw detector the display is a crucial element. The Sonatest **veo** range has a colour transflective TFT LCD, providing high visibility in all conditions, with the highest display to size ratio of any field instrument.

# Reliability

Robust design and proven reliability are essential attributes in demanding NDT environments. Down time is expensive and should

be minimized to ensure maximum productivity. Sonatest's reputation for rugged construction and high quality products has been earned over 50 years serving the industry. The **Veo** is constructed to exacting standards using a rigid, shock mounted, internal chassis surrounded by an impact absorbing enclosure and sealed to IP66. Designed to incorporate many features to make site work easier, the **Veo** is fitted with standard camera mount fittings underneath and four attachment points on the back for tripods and other equipment accessories. Additionally the four corner D-rings allow the **Veo** to be attached to carry straps or 4 point body harnesses, for easy movement, freeing hands for scanning. The **Veo** has a two battery design which are "hot swappable", therefore minimising down time and heightening the reliability of performance in the field.

## **UT Studio**

**VEO** package, for Phased Array configuration development, data analysis and report generation. Recorded **VEO** data files are easily transferred via a network or USB data key and used to generate new views and projections. Using a familiar windows drag and drop interface, the user can create multiple views such as Top, End and B-Scan by simply dragging **VEO** data files onto templates for display.

Powerful measurement cursors and extractors can added be to identify indications, size and annotate defects. Reports are easily generated and can be exported into PDF format for review and circulation. Free download of UT Studio Viewer is available for the technician's client.





# veo 16:64



Superior Imaging

Full Data Recording

**Fast Encoded Scans** 

Multi Scan

Simultaneous UT & PA

Instant Focal Law Calculations

Easy Report Generation

**IP66 Enclosure** 


Calibration Wizards

3D ScanPlan

Probe & Wedge Databases


TCG and DAC

**Unlimited Scan Lengths** 

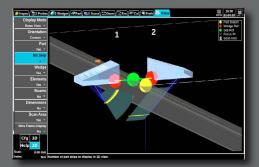


### 3D Scanplan

The **Veo** Scanplan supports multiple probes and scans, enabling the set up of inspection plans from a number of sources quickly and efficiently. Choose from a range of weld geometries and visualise the probes on the part in the locations you choose. Multiple skip paths are shown on the 3D Scanplan allowing the user to ensure coverage for weld inspections. Simple reference points are indicated for easy interpretation and locations of probes on the part can be quickly defined. Mixtures of probe types are supported in pulse echo and pitch and catch: phased array; TOFD or conventional UT. The Scanplan is an invaluable reference for your inspection report, communicating the results of your inspection more clearly, and saved as part of your inspection for future use.

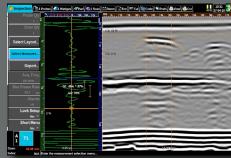

#### **TOFD**

The **veo** has a dedicated analogue architecture for TOFD inspection, using analogue filters developed from the Sonatest range of flaw detectors. Coupled with the lowest noise amplifiers, high speed data acquisition and a high definition display, superior quality TOFD scans can be viewed live at the same time as Phased Array. Phased Array and TOFD inspections can be evaluated together for added confidence during weld inspection. Built in evaluation tools, such as straightening and lateral wave removal, allow quick and accurate evaluation of the TOFD inspection, which can be included in a test report.

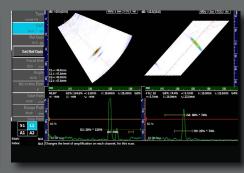

#### **Multi Scans**

The **veo** can be quickly configured to display a large range of multi scan views. This allows the user to select the views important for the inspection and to get best use from the display. Sector scan, top, side and end views can all be combined with multiple A-Scan views and TOFD. Cursors and rulers are used to identify indications in the views, whilst measurement tools give size and annotation.



www.sonatestveo.com

Huge File Size (3GB)

**USB** key Data Storage

WheelProbe Compatible

Hot Swap Battery Packs

Merged C-Scan

Simultaneous TOFD & PA

Ray Tracing with Reflection

Interface Triggering (TCG/DAC)

**16:128** (additional features)

Up to 128 probe elements

High Power -130 volts

Enhanced Multigroup up to 6 concurrent scans


# veo 16:128






#### A-Scan

The **Veo** supports traditional ultrasonic testing with mono transducers. The high definition LCD and fast graphics rendering ensure high levels of accuracy and a fast interactive waveform display. Thanks to the high resolution of the LCD display, measurements are clear and easy to read, and the wide screen format provides a huge viewing area for the scan. The A-Scan display ensures the peak signal is always displayed so that you never miss a defect.

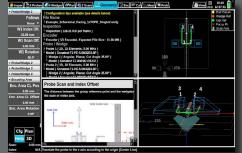

## Stop Mode

In stop mode the **veo** system is able to display four screens of information simultaneously. For example a Configurations Summary, Help Page, Plan view of Inspection (showing expected probe movement), 3D Scanplan (showing the probes, parts, inspection beams and planes of focus - as above. Any one of these can be maximised to a full screen view.

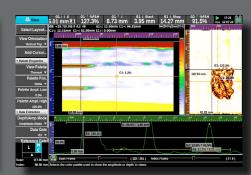

#### C-Scan

The **veo** offers full merged C-Scan capabilities allowing the inspector to see the complete area of inspection. TOP views (from angled or normal beam inspections) or C-Scans (from normal beam inspection) can be produced based on either amplitude or time of flight data. C-Scans from multiple passes can be merged together. This is particularly valuable for corrosion mapping and assessment of large composite structures.

### **Veo & Corrosion WheelProbe Scanning Systems**

The Corrosion WheelProbe is a tried and tested solution for corrosion mapping and can be combined with the **veo** and scanning system to provide simple and effective scanning solutions in this field. The scan width is close to 50mm in one pass and can be used on diameters from 12 -120cm (4 - 48 in). Importantly the tyre allows excellent coupling to rough surfaces, and the design allows for consistent reliable inspection in both depth and amplitude. Advantages of this system include the portability, relative simplicity and complete autonomy from the need for additional power sources on the inspection site. Additionally the **veo** CWP system gives the flexibility of utilising the CWP on a manual basis for small area scans, e.g. screening of pipe work of vessels (where LRUT has been used) or scanning along the length (Axial) of the pipe.



## Specifications (specifications are subject to change)

Pulsers

Configuration 16:64 (16 pulses/receivers; driving up to 64 elements)

Test Mode Pulse-Echo and Transmit/Receive

Transducer Socket

Pulse Voltage -50 V to -100 V (in steps of 10 V) Negative square wave (with ActiveEdge) adjustable 25ns to 1000ns (2.5ns resolution) <10 ns in 50 ohms load @100V Pulse Shape Pulse Width

**Edge Time** 

Output Impedance

Trigger

Synchronisation Encoder or free-running (time based)

Tx/Rx Focus Delay Range 0 to 10  $\mu$ s (2.5 ns resolution)

Receivers

Gain Range 0-84 dB, in steps of 0.1dB Input Impedance 50 ohms Bandwidth 200kHz - 27MHz (-3 dB)

Data Acquisition Architecture

Full digital delay and sum architecture 50/100 MHz

**Digitizing Frequency** Digitizer Resolution 12 bits 16 bits/sample **Data Processing** Data Recording Full raw data recorded Max A-Scan Length 8192 samples

(32 metres in steel LW, 50MHz, 1:128)

Maximum PRF 20 kHz Focal Law Qty Up to 1024

Constant Depth, Constant Sound Path, Constant Offset Smoothing, Averaging, Keep Max, Software Gain Focusing Type Processing 7 narrow bands and 3 broadbands, automatic **Filters** 

Sub-sampling 1:1 to 1:128

RF, Full, Positive, Negative Rectifier Reference

Initial pulse or gate, IFT supported

Scan & Views
Supported Scans S-Scan & L-Scan

Real Time Views S, L, B, C-Scan, Top and End view.

10 Standard & User customisable pallete Colour Maps

Multi-Group 4 scans and 1 TOFD Scan

Cursors

Cartesian, Extraction Box, Angular Path Length, Depth, Surface Distance, DAC, AWS Types Measurements

CONVENTIONAL UT/TOFD (MONO ELEMENT CHANNELS)

Pulsers
No. of Channels 2 TX/RX (2 multiplexed channels)

Pulse-Echo, transmit/receive, TOFD **Test Mode** Transducer Socket

BNC or LEMO 1 (factory option)
-400 V (adjustable from -100 to -400 V in steps of 10 V)
Negative Square Pulse (with ActiveEdge) Pulse Voltage Pulse Shape Pulse Width Adjustable from 25 ns to 2000 ns, resolution 2.5 ns

**Edge Time** <20 ns in 50 ohms load @400V <10 ns in 50 ohms load @150V

**Output Impedance** <10 ohms

Receivers

102 dB (-30 dB to 72 dB) Gain Range

Input Impedance 400 ohms

Filter Bands Narrow bands centred at 0.5 MHz. 1 MHz. 2.25 MHz

5 MHz, 7.5 MHz, 10 MHz and 15 MHz Broadband at 1 MHz to 18 MHz (-6dB)

Data Acquisition

Digitizing Frequency Digitizer Resolution 50/100/200 MHz 10 bits/sample Data Processing Data Recording 16 bits Full raw data Max. A-Scan Length 8192 samples Maximum PRF 12 kHz

Smoothing, Filter, Keep max Processing Sub-sampling 1:1 to 1:128

RF, Full, Positive, Negative

Trigger Synchronisation External digital input, encoder or internal

Scans & Views

Supported Scans A-Scans. A, B-Scan, TOFD Cursors

Cartesian, Hyperbolic Type

Measurements Path Length, Depth, Surface Distance, DAC, AWS, DGS

CONVENTIONAL AND PHASED ARRAY

Number of Points **DAC Quantity** 

1 with 3 sub-DAC (per focal law in PA)

Time Corrected Gain (TCG) **Number of Points** 0 to 60 dB Gain Range Max Gain Slope >50 dB/us Gates

A-Scan Gates 4 gates per A-scan (3 extracted A-scans per S/L-scan)

**Gate Trigger** 

2 Extraction Boxes per S/L-scan S/L-Scan Alarm LED 1 (sync on all gates & DACs) Available in A-Scan view Measurements 1D Peak (FSH, dB, D, BPL, SD)

1D Flank (FSH, dB, D, BPL, SD) Echo to Echo

PDF file, PNG screen captures, customer logo Allows viewing any uploaded PDF document Reporting **PDF Reader** 

GENERAL Data Storage

Internal 6 GB (standard)

b us (standard)
Hot removable "User" USB8 GB (standard)
Only limited by USB key capacity
To User Key - Up to 23 MB/s Write mode
Up to 27 MB/s Read mode External Transfer Rate

3GB (FAT32 file system) 10 to 15 cm/s (3.9 to 5.9 in/s) >10 m (32.8ft) Data File size

Typical Scanning Speed Typical Scan Length

Display

Size 25.9 cm (10.2 in) Wide aspect ratio

Resolution 1024 x 600 pixels

Colour 260k (65535 colours for scan palettes)

TFT LCD Type

I/O Ports

USB Ports 3 x USB certified ports (480 Mbps) Ethernet Video Output Gbit Ethernet (1000 Mbps) VGA Analog (1024 x 600)

I/O

Encoder 1 or 2 axis quadrature encoder (LEMO connectors)

Single ended and differential input 5 V, 500 mA, current limited

**Power Output** 

Integrated Help Active parameter description and Optimisation Tips. Language Support Six user selectable languages from: English, German,

French, Spanish, Russian, Chinese

Batteries & Power Supply

**Battery Type** Number of Batteries

Intelligent Li-ion batteries

Operation Battery Replacement Battery Recharge Battery Life

1 battery or 2 batteries, DC Power pack Hot swappable - no tools required Batteries recharge in unit, operating or not

6+ hours (typical operation).

Enclosure

H220 mm x W335 mm x D115 mm (8.66 in x 13.19 in x 4.52 in) Size Weight 5.28 kg(11.6 lb) 1 battery/ 5.75 kg (12.6 lb) 2 batteries

Environmental

Temperature

Operating -10 °C to 40 °C (14 °F -104 °F). Storage -25 °C to 70 °C (-13 °F -158 °F) 5 to 95% non-condensing

**Relative Humidity** Meets IP66 Environmental

1 year. EN12668. Warranty Calibration Standard

Vibration EN60068-2-6 Sinusoidal vibration, 50hz to 500Hz, 0.5mm, 18g, 5 sweep cycles

According to MIL-STD-810F, Method 516.5, Procedure IV; 26 Shock (drop) Tested

"1-meter drops" (each face, edge, corner), while operating, to

2 inch plywood over concrete.

#### Veo 16:128 only

PHASED ARRAY

16:128 (16 pulser/receivers; driving up to 128 elements)

Configuration Pulse Voltage -50 V to 130 V (insteps of 10V) <32 ohms

Output Impedance Data Acquisition

Trigger Synchronisation External digital input, encoder or internal

Scan & Views

Multi-Group Up to 6 scans (6 phased array or 4 phased array with 2UT/TOFD)

Supported Inspection Codes

Other relevant Codes are also met.

ASME Code Case 2235-9 Use of Ultrasonic Examination in Lieu of Radiography
 ASME Code Case 2541 Use of Manual Phased Array Ultrasonic Examination Section V ASME

ASTM E2491 Standard Guide for Evaluating Performance Characteristics of Phased-Array Ultrasonic Examination Instruments and Systems


 ASTM E2700 Standard Practice for Contact Ultrasonic Testing of Welds Using Phased Array
 CEN EN 583-6 - Nondestructive testing - Ultrasonic examination - Part 6 -TOFD as a Method for Defect Detection and Sizing

· BSI BS7706 - Guide to Calibration and Setting-Up of the Ultrasonic TOFD Technique for the Detection, Location, and Sizing of Flaws

# Phased Array Transducers

### X-Series

Building on the Phased Array instrumentation range from Sonatest Ltd, the X-Series of transducers now offer the operator a broader choice in range and frequencies; together with the assurance of industry standard configurations. These X-Series phased array probes have an integral 2.5 metre cable and an IPEX connector, compatible with the Sonatest veo and other leading phased array testing equipment.

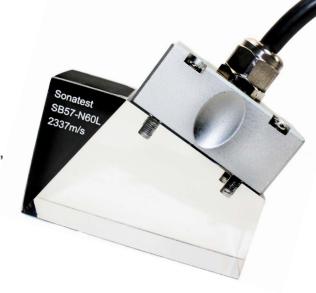

#### X1 Series - Miniature & Sub-Miniature PA Probes

The X1 models are small probes for aerospace and limited access work. Key applications include "Scribe line" inspection.

#### **X2 Series - General Purpose PA Probes**

This is a general purpose compact probe design suitable for sector scanning applications.

#### X3 Series - Long Array Probes for Electronic Scanning

These probes are ideal for Linear Scanning applications (L-Scan or E-Scan).

#### X4 Series - Miniature Phased Array Probes with Integral Wedge

An integral wedge design which are dimensionally and ultrasonically equivalent to standard European mono-element shear wave probes. A good choice where a compact angle beam is required.

#### X5 Series - Medium Phased Array Probes - AWS, High Temperature & Deep Penetration

These are low frequency high energy probes intended for fairly deep penetration applications and general testing. These can also be used with the appropriate SW62XXX range wedges, including the "Snail" and high temperature.

## DAAH (Detachable Active Array Head)

Sonatest manufacture a wide range of Array and Mono-Element probes suitable for use on the veo and other phased array flaw detectors.

The DAAH (Detachable Active Array Head) range provides a unique phased array probe solution using standard cables and a range of detachable probe heads. This concept yields advantages in cost and gives the end user more flexibility in the field during the inspection process.

Frequency	Model Number	No.of Elements	Pitch (mm)	Wedge
(MHz)				
2.25	T1-PE-2.25M20E1.2P	20	1.2	External
2.25	T1-PE-2.25M14E1.2P-35W0D	14	1.2	35º Integral
2.25	T1-PE-2.25M18E1.2P-17W0D	18	1.2	17º Integral
5	T1-PE-5.0M32E0.8P	32	0.8	External
5	T1-PE-5.0M22E0.8P-35W0D	22	0.8	35º Integral
5	T1-PE-5.0M26E0.8P-17W0D	26	0.8	17º Integral
7.5	T1-PE-7.5M44E0.6P	44	0.6	External
7.5	T1-PE-7.5M30E0.6P-35W0D	30	0.6	35° Integral
7.5	T1-PE-7.5M40E0.6P-17W0D	40	0.6	17º Integral
5 MHz	CWP-05-64-08-05-veo	64	0.8	WheelProbe
2 MHz	CWP-02-64-08-05-veo	64	0.8	WheelProbe



Further transducer models available. Enquire for full range.

## **VEO** Kits & Accessories

#### Standard **Veo** Kit

Calibration Certificate

UT Studio Single user licence

- Conventional Views (A/B/C/D)
- Phased Array Views (S/L-Scan)
- Viewing Reports

USB Memory Stick (8GB)

Lithium-Ion Battery packs x 2

Power Cord & Power Supply adaptor

Couplant

Quick Start Guide & User Manual CD

Screen Protector (Anti-Glare)

Carry Strap

4-point Neck Harness

Transport Case (Airplane carry on size)



#### **veo** Kits

- •veo & Magman Scanner
- •veo & Corrosion WheelProbe
- •veo & Manual TOFD
- •veo & Manual Weld

# **VEO** Accessories Splash Proof USB Keyboard

Waterproof Mouse

Battery Charger

Tripod

Lithium-Ion Battery pack

UT Studio - Professional edition

QuickTrace Encoder

Rapidscan to **veo** Encoder Adapter

DAAH Array probe cable

Screen Protector

USB Memory Stick (8GB)

Phased Array Cable Y-Splitter

Splitter Box (32/32 or 64/64)

TOFD 40 dB Pre-amp

Phased Array Test Block Steel

Phased Array Test Block Aluminium

HD15 Encoder Adapter



Distributed by:



#### SONATEST LTD

Dickens Road, Old Wolverton, Milton Keynes, MK12 5QQ, UK.
Tel: +44 (0)1908 316345 Fax: +44 (0)1908 321323
www.sonatest.com sales@sonatest.com

Part No; 147385\_lss 4\_08-12



